

GUNCEAL CARRY

AVAILABLE IN 12 SIZES

Invisibility...
Faster Access...
AND Comfortable!

- RETRIEVE YOUR FIREARM IN SECONDS!
- DESIGNED FOR THE MOST ACTIVE LIFESTYLE
- DISCREETLY VERSATILE WITH BOTH CONCEALED AND OPEN CARRY*
- CAN BE WORN SIX DIFFERENT WAYS*
- ADDITIONAL MINI POUCH FOR TACTICAL KNIFE
- WATERPROOF INNER LINING PREVENTS WEAPON DAMAGE
- TWELVE SIZES AVAILABLE TO ACCOMMODATE ALL BODY TYPES
- COMFORTABLE STRAP WITH VELCRO® "E-Z ADJUST" HOOK
- OUR PATENT-PENDING SAFETY STRAP MOVES WITH YOU AND NOT AGAINST YOU
- GUNCEAL CARRY IS ENDORSED BY LEADING CHIROPRACTORS
- LIFETIME REPLACEMENT WARRANTY AGAINST NORMAL WEAR AND TEAR*

727-326-2681 • GUNCEALCARRY.COM

*Instructions for use and additional warranty information on reverse side

GUNCEAL CARRY HOLSTER USE INSTRUCTIONS

CAUTION: THE INSTRUCTIONS BELOW ARE FOR SAFE, EFFICIENT USE OF YOUR FIREARM USING GUNCEAL CARRY HOLSTER. WE RECOMMEND A PERIOD OF PRACTICE TO BECOME COMFORTABLE WITH DRAWING AND HOLSTERING YOUR FIREARM. ALWAYS ENGAGE SAFETY LOCK AND BE SURE WEAPON IS UNLOADED DURING PRACTICE.

MAKE CERTAIN THAT YOU PURCHASE THE RIGHT SIZE HOLSTER FOR YOUR FIREARM. THE TRIGGER SHOULD BE COMPLETELY COVERED BY THE HOLSTER FRONT PANEL. IF IT DOES NOT, RETURN AND EXCHANGE FOR CORRECT SIZE.

WEARING GUNCEAL CARRY: Place the Gunceal Carry holster pouch on the front center of your body and wrap the strap around your hips, below the waist and around the top of your hips. Pull the strap through the plastic loop, fold over and attach Velcro®. Stretch the elastic for a better fit. For good performance and comfort, tighter is better.

PLACING FIREARM IN GUNCEAL CARRY: Place your firearm in the holster according to your draw hand. If the trigger and guard are concealed and everything above it is visible, your Gunceal Carry pouch is the correct size.

DRAWING YOUR FIREARM: Consistent practice of drawing and holstering your firearm will help develop the muscle memory for a quick and natural draw. Gunceal Carry is designed for active lifestyles. Practice all situations like sitting, driving, walking, running, etc.

TIPS FOR WEARING: Wear comfortable clothing that fits loosely enough to stay in place when you're moving. Wear over the clothing you tuck in to pants, skirt, shorts, etc. Your last outer garment should cover the weapon and pouch for concealed carrying, but not obstruct your ability to draw. For both concealed and open carry, be sure your weapon is firmly secured with the holding strap.

NORMAL ACTIVITIES WHILE CARRYING: Gunceal Carry can be quickly adjusted for things like driving or restroom visits. Men, simply move the holster to the right or left to access fly. Ladies, after lowering or raising the required garment, just move the holster up higher to chest area, then lower when finished.

WASHING: To prevent damage, machine wash only in a closed washing bag. For maximum life, hand-wash with warm water, blot away excess water with a towel then hang in open area to air dry. Using a dryer will damage the elastic in the strap. Since Gunceal Carry does not come in direct contact with your body, there is no need for frequent washing.

LIFETIME GUARANTEE

Keep this sheet with your receipt as proof of purchase.

GUNCEAL CARRY guarantees replacement for life against material and labor defects, and damage from normal wear and tear. If a defect appears in your product, simply return it for repair or replacement and be sure to include your contact information.

WARNING:

The producers and sponsors of Gunceal Carry disclaim any liability from us of this product. By purchasing this product you understand and agree with this statement.